


TILLEGG TIL VEILEDNING PLEIEPRODUKTER FOR UTENDØRS MASSASJEBAD

VED ANKOMSTER:

1. Slå opp på den ønskede vann vanntemperatur.
(kan gjøres dagen i forveien med wifi modul i spaet)
2. Kontroller pH og alkalitet, og justere pH til mellom 7,0 til 7,4 og Alkalitet mellom 80-120 mg / l.
3. Sjokkbehandle vannet ved tilsetning av 6 stk. SunWac 12 eller 22,5 ml MiniChlor.
4. Etter 30-60 minutter mål klorverdien - blir det ingen rød farge fra DPD1 tablett sjokkbehandles vannet igjen og måler igjen klor etter 30-60 minutter.
5. Før en bader er det viktig å påse at det ikke er for mye klor og/eller andre desinfiseringsmidler i vannet. For å senke klornivået noe kan en mindre mengde Spachock brukes.

Doseringstabeller for SpaCare produkter

Parameter	Korrekt verdi
Alkalinitet	80-120 mg/l
PH	7,0 - 7,4
Klor	1,0 - 5,0 mg/l
Brom	2,0 - 8,0 mg/l

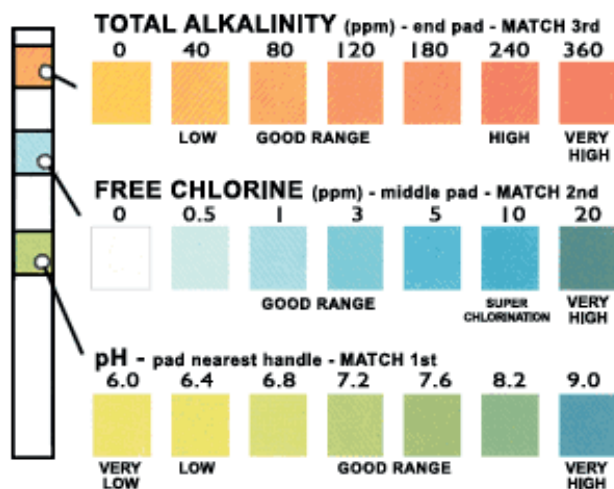

OBS: husk å alltid dusje og vaske seg godt før man går oppi spaet. Påse at man aldri går på skitne flater eller noe som inneholder jord før man går oppi spaet.

ALKALINITET - Heves med SpaCare Alka Up

1000 liter spa		1250 liter spa		1500 liter spa	
Heve mg/l	Tilsett ml	Heve mg/l	Tilsett ml	Heve mg/l	Tilsett ml
10	18	10	23	10	27
20	36	20	45	20	54
30	54	30	67	30	81
40	72	40	90	40	108
50	90	50	112	50	135
60	108	60	135	60	162
70	126	70	157	70	189
80	144	80	180	80	216

PH - Senkes med pH Down Liquid

1000 liter spa		1500 liter spa	
Senke mg/l	Tilsett ml	Senke mg/l	Tilsett ml
0,1	6	0,1	9
0,2	12	0,2	18
0,3	18	0,3	27
0,4	24	0,4	36
0,5	30	0,5	45
0,6	36	0,6	54
0,7	42	0,7	62
0,8	48	0,8	71

PH- HEVES MED PH UP LIQUID


1000 liter spa		1500 liter spa	
Heve mg/l	Tilsett ml	Heve mg/l	Tilsett ml
0,1	15	0,1	22,5
0,2	30	0,2	45
0,3	45	0,3	67
0,4	60	0,4	90
0,5	75	0,5	112
0,6	90	0,6	135
0,7	105	0,7	157
0,8	120	0,8	180

GUIDANCE FOR WATER TREATMENT IN OUTDOORSPA

ARRIVAL:

1. Select the wanted water temperature, (can be done in advanced with the Wi-Fi module)
2. Control the PH and alkalinity, and if needed adjust using the schematics below to the correct values shown in right column
3. Disinfect the water with 6pcs SunWac 12 or 22,5 ML chlorine
4. After 30-60 min, measure the chlorine level, if there is no red color for the DPD1 tester, disenfect the water again. After 30-60 min do a new chlorine test. Repeat this untill you get the correct values as shown in right coloumn
5. Before the bath, make sure there is not too much chlorine, or other desinfectans in the water.. Too lower the chlorine levels, a smaller amount of spa chock can be used.

Parameter	Korrekt verdi
Alkalinity	80-120 mg/l
PH	7,0 - 7,4
Chlorine	1,0 - 5,0 mg/l
Bromine	2,0 - 8,0 mg/l

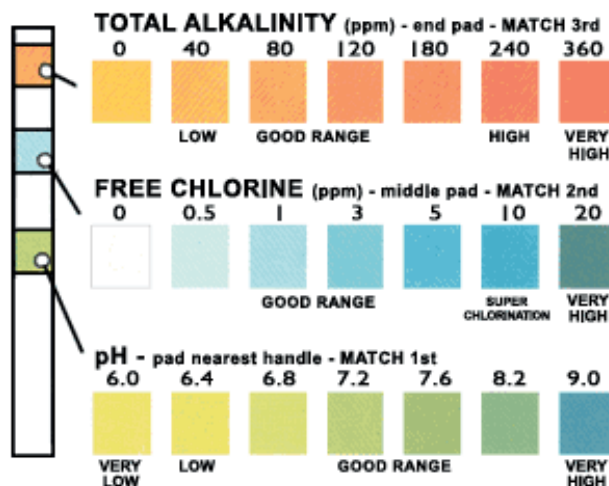

OBS: Remember to always shower in advance before entering the spa. Make sure you dont walk on any dirty surfaces, or anything else that can contain dirt. this to avoid bacteria in the water.

ALKALINITY - raise levels with SpaCare Alka Up

1000 liter spa		1250 liter spa		1500 liter spa	
Raise	Add ml	Raise	Add ml	Raise	Add ml
10	18	10	23	10	27
20	36	20	45	20	54
30	54	30	67	30	81
40	72	40	90	40	108
50	90	50	112	50	135
60	108	60	135	60	162
70	126	70	157	70	189
80	144	80	180	80	216

PH - lower levels with PH Down Liquid

1000 liter spa		1500 liter spa	
Lower	Add ml	Lower	Add ml
0,1	6	0,1	9
0,2	12	0,2	18
0,3	18	0,3	27
0,4	24	0,4	36
0,5	30	0,5	45
0,6	36	0,6	54
0,7	42	0,7	62
0,8	48	0,8	71

PH- raise levels with PH Up Liquid

1000 liter spa		1500 liter spa	
Raise	Add ml	Raise	Add ml
0,1	15	0,1	22,5
0,2	30	0,2	45
0,3	45	0,3	67
0,4	60	0,4	90
0,5	75	0,5	112
0,6	90	0,6	135
0,7	105	0,7	157
0,8	120	0,8	180